


USING A SEPARATE SOURCE BACKWASH FOR A CLACK FILTER

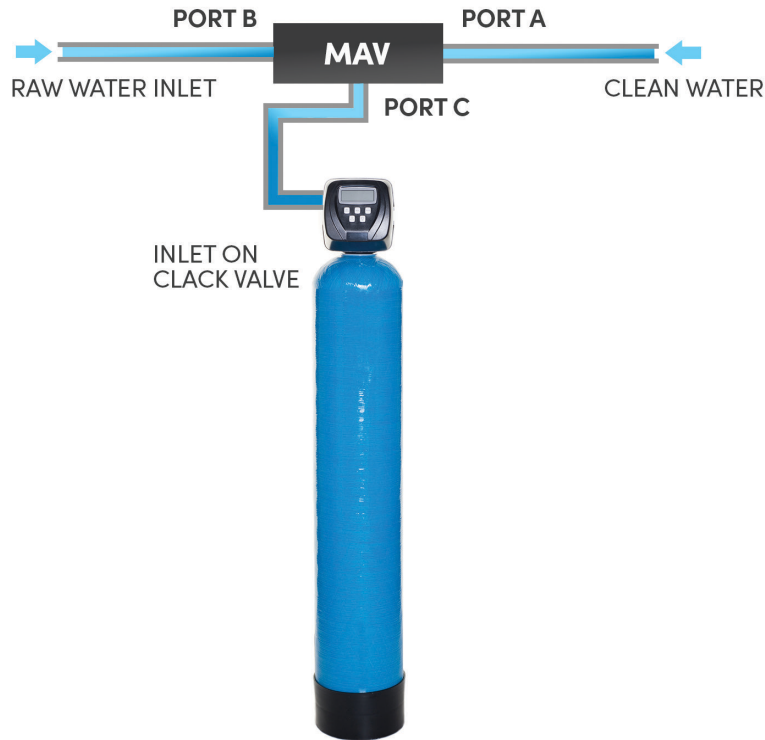

The MAV Ports

Port C of the MAV connects to the valve inlet.

Port A of the MAV connects to the clean water inlet.

Port B of the MAV connects to the raw water inlet.

Programming

The electrical connection on the MAV plugs into the bottom of the Clack valve board labelled MAV.

One line of programming must be changed after connection. Press 'Next' & 'Down' together for 3 seconds, when the screen changes, repeat. Scroll to step 4 and change to 'SEPS'.



**Pedrollo
Distribution**

Smart systems
for water

t: 01543 415200 e: sales@pedrollo.co.uk w: pedrolldistribution.co.uk

Crossfield Fort, Crossfield Road Industrial Estate, Lichfield, WS13 6RJ